



A splash of elegance


Temperature limiting adjustment 04120-00 and 04125-00 shower valve.



1. Remove handle.



2. Unscrew cap from valve.

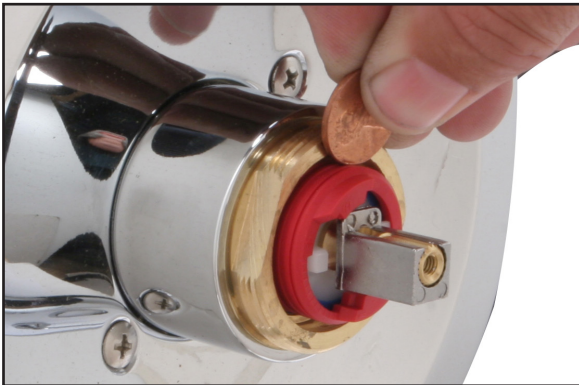


3. Using a coin, screwdriver or finger nail, remove red limiting adjustment ring.



4. Rotate ring to the desired limiting position.

* To adjust limit stop, turn red ring counter clockwise for more hot water or clockwise for less hot water. +/- indicators are on the limit stop ring for easy adjusting.

Hot temperature limit stop *

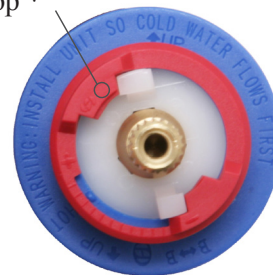

Reinstall everything in reverse order



Afeel Corp. dba Huntington Brass
11100 Dana Circle
Cypress, Ca 90630
Tel : 1-800-888-6604
Fax : 1-888-455-5007

Visit our web site at:
www.huntingtonbrass.com